

# Input List

## Cabaret


SUBJECT TO CHANGE

Version 7  
3/15/19

Sound Designer:  
Scott MacDonald

### Midas Heritage 3000 (Left Side)

Source	Microphone / Device	Notes	Inf Patch	Input Patch	Wireless Reciever	Console	Insert	Channel	Name	
SM VOG	SM48s	Y-Cable into QL1 Ch 8		Direct		Midas		1	SM VOG	
Director VOG	SM48s, Audio-Technica ATW-T1802 & ATW-R1810			Direct		Midas		2	Director	
FoH Talkback	SM48s			Direct		Midas		3	FoH	
Wireless 24	SSM				Reciever 4					
Wireless 23	SSM									
Wireless 22	SSM		USR 34	Mic 34					TBA	
Wireless 21	SSM / B6	Max	USR 33	Mic 33			Midas		4	Max
Wireless 20	SSM / B6	Hans / Rudy	USR 32	Mic 32	Reciever 3	Midas	Yamaha YDP2006 4 R	5	Hans / Rudy	
Wireless 19	SSM / B6	Victor	USR 31	Mic 31			Midas		6	Victor
Wireless 18	SSM / B6	Bobby E	USR 30	Mic 30			Midas		7	Bobby E
Wireless 17	SSM / B6	Bobby H	USR 29	Mic 29			Midas		8	Bobby H
Wireless 16	SSM / B6	Ernst / Herman	USR 28	Mic 28	Reciever 2	Midas		9	Ernst / Herman	
Wireless 15	SSM / B6	Schultz H	USR 27	Mic 27			Midas		10	Schultz H
Wireless 14	SSM / B6	Schultz E	USR 26	Mic 26			Midas		11	Schultz E
Wireless 13	SSM / B6	Schneider	USR 25	Mic 25			Midas		12	Schneider
Wireless 12	SSM / B6	Kost / Chanteuse	DSR 12	Mic 12	Reciever 1	Midas		13	Kost / Chant	
Wireless 11	SSM / B6	Kost / Fritsy	DSR 11	Mic 11			Midas		14	Kost / Fritsy
Wireless 10	SSM / B6	Helga	DSR 10	Mic 10			Midas		15	Helga
Wireless 9	SSM / B6	Texas	DSR 9	Mic 9			Midas	Yamaha YDP2006 4 L	16	Texas
Wireless 8	SSM / B6	Lulu	DSR 8	Mic 8	Reciever 1	Midas		17	Lulu	
Wireless 7	SSM / B6	Rosie	DSR 7	Mic 7			Midas		18	Rosie
Wireless 6	SSM / B6	MC E	DSR 6	Mic 6			Midas	Yamaha YDP2006 3 R	19	MC E
Wireless 5	SSM / B6	MC H	DSR 5	Mic 5			Midas	Yamaha YDP2006 3 L	20	MC H
Wireless 4	SSM / B6	Sally E	DSR 4	Mic 4	Reciever 1	Midas	Yamaha YDP2006 2 R	21	Sally E	
Wireless 3	SSM / B6	Sally H	DSR 3	Mic 3			Midas	Yamaha YDP2006 2 L	22	Sally H
Wireless 2	SSM / B6	Cliff E	DSR 2	Mic 2			Midas	Yamaha YDP2006 1 R	23	Cliff E
Wireless 1	SSM / B6	Cliff H	DSR 1	Mic 1			Midas	Yamaha YDP2006 1 L	24	Cliff H

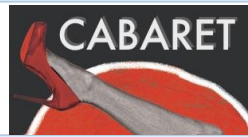

# Input List

Version 7  
3/15/19


## Cabaret

Sound Designer:  
Scott MacDonald

SUBJECT TO CHANGE

### Midas Heritage 3000 (Right Side)

Source	Microphone / Device	Notes	Inf Patch	Input Patch		Console	Insert	Channel	Name
Vox Verb Klub L	Ro8 - Out 1		Direct	25		Midas		25	Verb Klub L
Vox Verb Klub R	Ro8 - Out 2		Direct	26		Midas		26	Verb Klub R
Vox Verb Book L	Ro8 - Out 3		Direct	27		Midas		27	Verb Book L
Vox Verb Book R	Ro8 - Out 4		Direct	28		Midas		28	Verb Book R
Vox Verb Spatial L	Ro8 - Out 5		Direct	29		Midas		29	Verb Spatial L
Vox Verb Spatial R	Ro8 - Out 6		Direct	30		Midas		30	Verb Spatial R
Vox Verb Chanteuse	Yamaha - Omni Out 7		Direct	31		Midas		31	Verb Chant
				32		Midas		32	
ALS Room Mic	Sennheiser Shotgun		Direct	33		Midas		33	Room
				34		Midas		34	
FX 1	Scarlett 18i20 Out 1 (L)	Band L	Direct	35		Midas		35	Band L
FX 2	Scarlett 18i20 Out 2 (R)	Band R	Direct	36		Midas		36	Band R
FX 3	Scarlett 18i20 Out 3	Main L	Direct	37		Midas		37	Main L
FX 4	Scarlett 18i20 Out 4	Main R	Direct	38		Midas		38	Main R
FX 5	Scarlett 18i20 Out 5	Spatial L	Direct	39		Midas		39	Spatial L
FX 6	Scarlett 18i20 Out 6	Spatial R	Direct	40		Midas		40	Spatial R
FX 7	Scarlett 18i20 Out 7	Rear L	Direct	41		Midas		41	Rear L
FX 8	Scarlett 18i20 Out 8	Rear R	Direct	42		Midas		42	Rear R
FX 9	Scarlett 18i20 Out 9	Gramophone	Direct	43		Midas		43	Gramophone
FX 10	Scarlett 18i20 Out 10	Table Phone	Direct	44		Midas		44	Table Phone
Bandstand L	Yamaha - Omni Out 1		Direct	St. 1 L		Midas		St. 1 L	Bandstand L
Bandstand R	Yamaha - Omni Out 2		Direct	St. 1 R		Midas		St. 1 R	Bandstand R
Band Main L	Yamaha - Omni Out 3		Direct	St. 2 L		Midas		St. 2 L	Band Main L
Band Main R	Yamaha - Omni Out 4		Direct	St. 2 R		Midas		St. 2 R	Band Main R
Band Verb L	Yamaha - Omni Out 5		Direct	St. 3 L		Midas		St. 3 L	Band Verb L
Band Verb R	Yamaha - Omni Out 6		Direct	St. 3 R		Midas		St. 3 R	Band Verb R
FoH Aux L	pcDI		Direct	St. 4 L		Midas		St. 4 L	Aux L
FoH Aux R	pcDI		Direct	St. 4 R		Midas		St. 4 R	Aux R

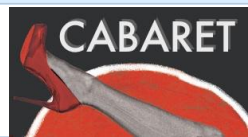

# Input List

## Cabaret

SUBJECT TO CHANGE

Version 7  
3/15/19

Sound Designer:  
Scott MacDonald

### Yamaha QL1

Source	Microphone / Device	Notes	Cable	Snake	Input	Dante	Console	Channel	Name
Key 1 L	XLR Output		10'	Direct	Rio 1	1	Yamaha	St. 1 L	Key 1 L
Key 1 R	XLR Output		10'	Direct	Rio 2	2	Yamaha	St. 1 R	Key 1 R
Key 2 L	DI Whirlwind Hotbox		TRS + 10'	Direct	Rio 3	3	Yamaha	St. 2 L	Key 2 L
Key 2 R	DI Whirlwind Hotbox		TRS + 10'	Direct	Rio 4	4	Yamaha	St. 2 R	Key 2 R
Kick In	Shure Beta 91A	Towel	10'	Snake 1 - 1	Rio 5	5	Yamaha	1	Kick In
Kick Out	Shure Beta 52A	Short Boom	10'	Snake 1 - 2	Rio 6	6	Yamaha	2	Kick Out
Snare Top	SM57	Med Boom	10'	Snake 1 - 3	Rio 7	7	Yamaha	3	SnareTop
Snare Bot	SM57	Med Boom	10'	Snake 1 - 4	Rio 8	8	Yamaha	4	SnareBot
Hi-Hat	SM81	Boom	10'	Snake 1 - 5	Rio 9	9	Yamaha	5	Hi-Hat
Tom 1	Electro-Voice N/D 468	Med Boom	20'	Snake 1 - 6	Rio 10	10	Yamaha	6	Tom 1
Tom 2	Electro-Voice N/D 468	Med Boom	20'	Snake 1 - 7	Rio 11	11	Yamaha	7	Tom 2
Drum OH L	AKG C414XL	Tall Boom	30'	Snake 1 - 10	Rio 14	14	Yamaha	St. 3 L	OH L
Drum OH R	AKG C414XL	Tall Boom	30'	Snake 1 - 11	Rio 15	15	Yamaha	St. 3 R	OH R
Violin	Sennheiser MKE 2 w/ K3U	Velcro	30'	Snake 2 - 1	Rio 16	16	Yamaha	8	Violin
Viola	Sennheiser MKE 2 w/ K3U	Velcro	20'	Snake 2 - 2	Rio 17	17	Yamaha	9	Viola
Cello	Schoeps CMC641 (MK41)	Stand Clamp	10'	Snake 2 - 3	Rio 18	18	Yamaha	10	Cello
Bass Pick-Up	DI Whirlwind Hotbox		TS + 10'	Snake 2 - 4	Rio 19	19	Yamaha	11	Bass PU
Bass Mic	MD 421 II	Foam (insert on inst)	10'	Snake 2 - 5	Rio 20	20	Yamaha	12	Bass Mic
Guitar / Banjo	SM81	Boom	10'	Snake 2 - 6	Rio 21	21	Yamaha	13	GuitBanj
Guitar DI	DI Whirlwind Hotbox	TBD	TS + 10'	Snake 2 - 7	Rio 22	22	Yamaha	14	Guitar
Reeds 1 (Clar/Alto Sax)	Neumann KM 185	Stand Clamp	30'	Direct	Rio 23	23	Yamaha	15	Reeds 1
Reeds 2 (Clar/Ten Sax)	Neumann KM 185	Stand Clamp	30'	Direct	Rio 24	24	Yamaha	16	Reeds 2
Trumpet	Sennheiser MD 421 II	Boom	20'	Direct	Rio 25	25	Yamaha	17	Trumpet
Trombone	Sennheiser MD 441	Stand Clamp	10'	Direct	Rio 26	26	Yamaha	18	Trombone
Siren	SM57	Boom	20'	Direct	Rio 27	27	Yamaha	19	Siren
MD Talkback	SM48s	Boom	20'	Direct	Rio 28	28	Yamaha	20	MD Talk
SM VOG	SM48s	Y-Cable from Midas		Direct	Omni In 8		Yamaha	St. 8 L	SM VOG
SM VOG							Yamaha	St. 8 R	
FoH Band Talkback	SM48s			Direct	Omni In 16		Yamaha	n/a	Talkback
Mons Vox	Midas				Omni In 1		Yamaha	21	Mons Vox
Klub Verb	Midas				Omni In 2		Yamaha	22	Klub Verb
Book Verb	Midas				Omni In 3		Yamaha	23	Book Verb
Spatial Verb	Midas				Omni In 4		Yamaha	24	Spatial Verb
Chant Verb	Midas				Omni In 5		Yamaha	25	Chant Verb
Mons FX	Midas				Omni In 6		Yamaha	26	Mons FX